

Maintx Maintenance Management System

Stockroom


Creating A Storage room Receiving A Stock Item
Connecting Parts To Equipment Adding Parts To Group




Stockroom


Here we will learn how to create a storage room, Receive a storage product that connects parts for equipment and more.



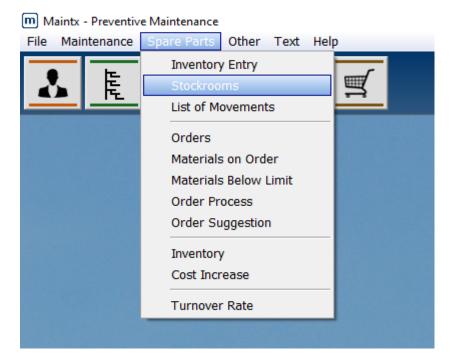

Start by going to the menu, click on "Spare Parts" and select "Stockrooms"

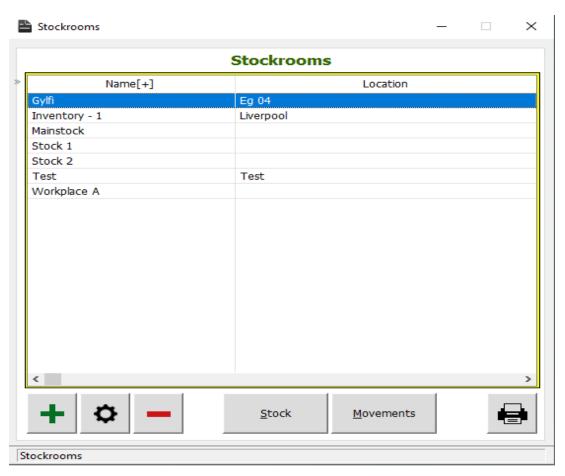

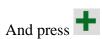






Here we need to enter a name and a supervisor, then press


Spareparts

To enter a part of the warehouse, we get to the button.

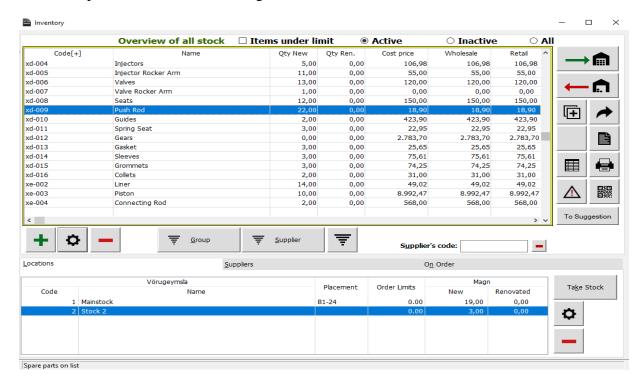

We press or we can right-click the **Inventory box** and click "**Insert**"



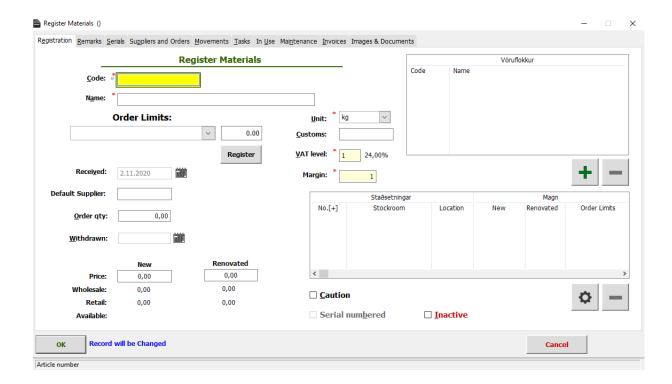


Here we need to enter the "Code", "Name" and "Unit". To set the "VAT" we right-click on the box and either create a new or select existing.

We do the same for margin (right-click and select a pre-existing or create a new one) and press

We can get into the price of a new and a renovated part.

In "Order Limit" we decide at what point Maintx should let us know, we have to order more parts.



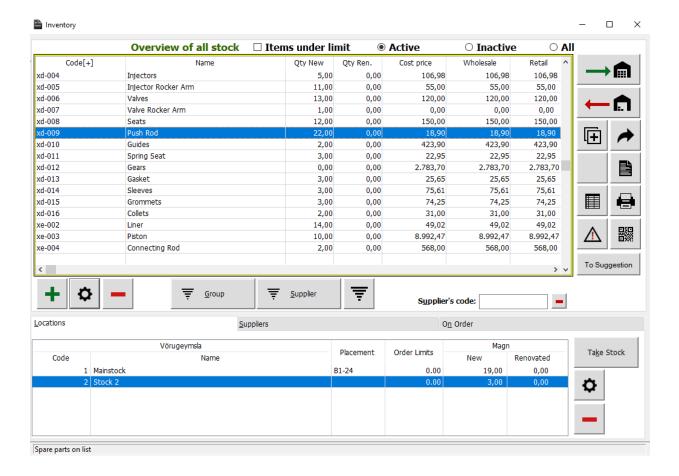

When the amount is less than the threshold for the "**New Number**" (volume) number of turns yellow. It is Maintx let us know that we have to order more.

When we go to order more parts Maintx reminds us what is a suitable amount to order each time. This amount we register here in "Order Quantity".


(if we trick the "Caution" box, the part/item will be marked with red, as in hazardous og handle with care)

Once finished we click




Receiving a Stock Item

We start by selecting the part we want:

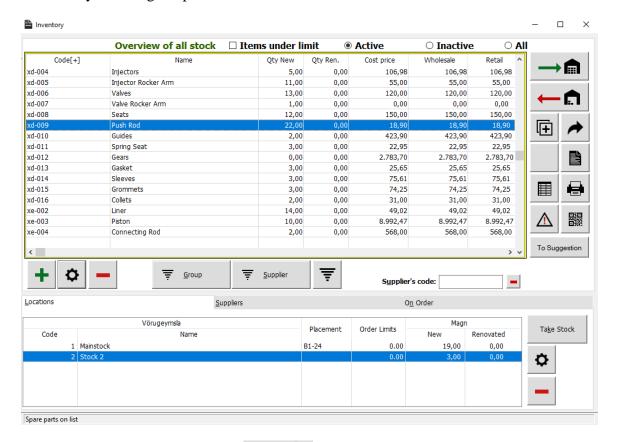


In the upper right corner we click

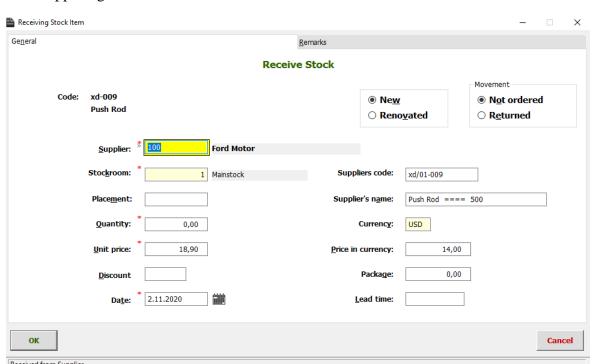


We right click the box marked "Supplier".



A list of our suppliers comes up, we either select a pre-existing supplier or insert a new one.

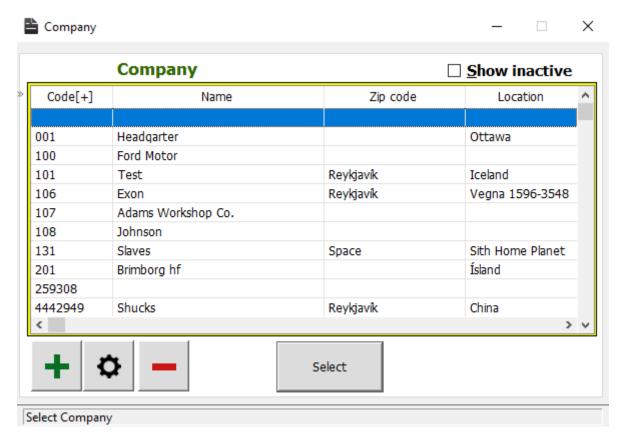

To add another supplier we click

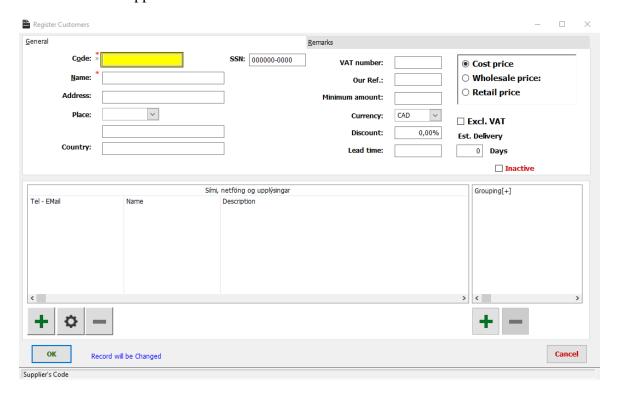

Enter a code, a name and so on.. and click OK



Now choose the new supplier and press Select or double click the supplier. Right click the stockroom box, locate and double click the preferred stockroom.

Enter the Items placement in the stockroom.

If the supplier uses a different code or name for this item we can enter them in the relevant boxes.

Otherwise we leave them blank.

Once we have filled out all the relevant information we press

Connecting Part and Equipment

We go to overview

🖺 Equipment- and Equipment Parts Overview П X **Company Overview** <u>T</u>asks Stock History Images & Docun Tasks for this unit ⊕ ■ 001 - Z001Z ■ 002 - Z002Z Code[+] Task Name Su Printed Workbook Last Done Active Type ±- ■ 003 - Z003Z ±- ■ 004 - Z004Z ±- **■**□ 009 - z009 ±- ■ 0098 - z0098 ± ■ 11 - Farskip 1234 - 5678 ± ■ 1NZ - Our New Zone Bílar-1 - Bílafloti
 □ Hús-1 - Sveitarfélag
 □ Hús-2 - Fjölbýlishús ■ MSB - Bifreiðar
 ■ MSF - Fasteignir SKIP-1 - Propulsion and manuvering

SKIP-2 - Structure SKIP-3 - Electrical power

SKIP-4 - Information systems SKIP-5 - Ship services


SKIP-6 - Outfit and equipment SKIP-7 - Mission systems ± SKIP-8 - Zinc refiningtr. ■ T001 - Tankskip ■ Z001 - Z001 ± ■ ZZZ9 - Gæðastjórnun + 0 Planned \Box

Choose the equipment we want to connect the part to.


Select the "Stock" tab and click

Overview of departments, Equipment and equipment parts



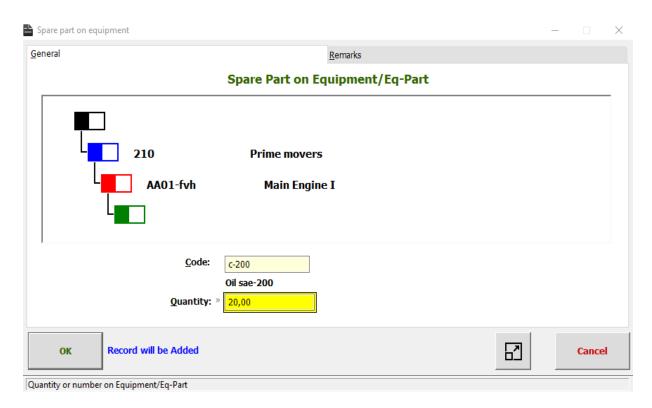

Right click "code" find the correct item and double click.

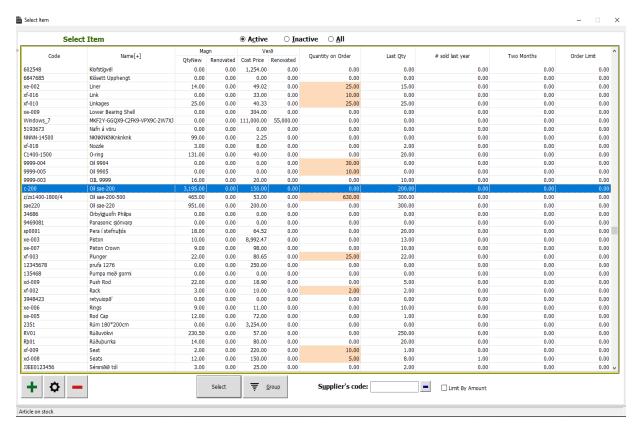


Enter the quantity and press

OK




Adding Parts to Groups

To be able to add parts to groups you will need to open the "Inventory" window, go to "Spare Parts" in the menu tab and select "Inventory Entry" from the drop down list. OR simply press the button.

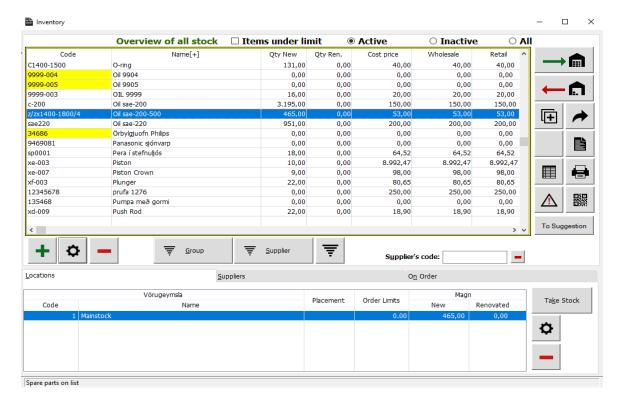

To make a new group, we press the Group button in the "Inventory window".

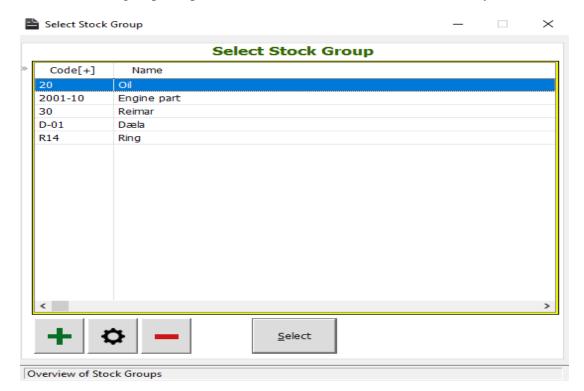




The "**Select Stock Group**" window will appear. To create a new group we press and give our group a code and a name. Finally we click


Now we have created a group, next step is to put some spare-parts in it.

We start by going to "Inventory"

Spare parts on list

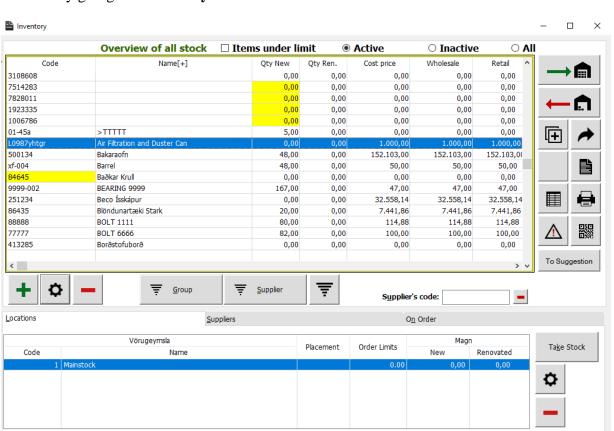


We select the part we want to group and click . Or simply double-click it.

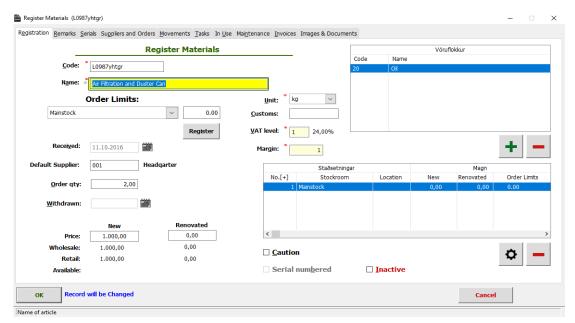




Under the box marked "Stock group" we click We get a list of available stock groups.

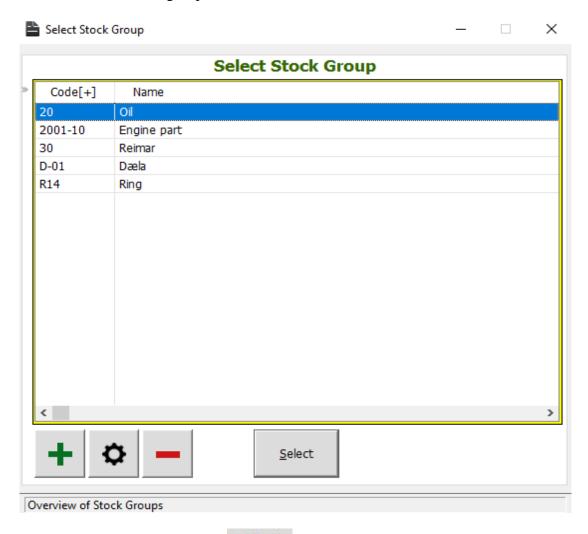

Choose the group we want and click

Select or double-click the group name.




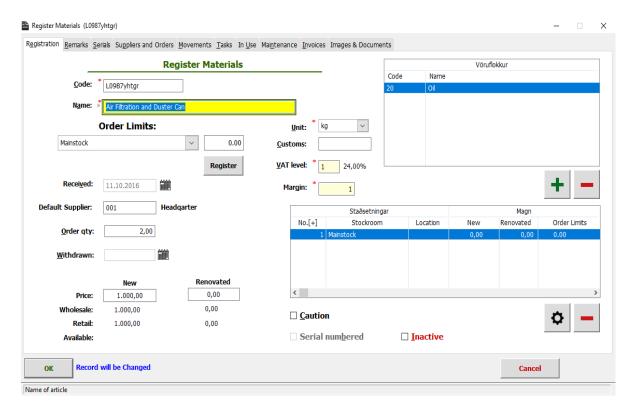


Now we have put this part into a group. Each part can belong to more than one group at a time. To add it to more groups we simply click again and repeat the last few steps.

If we want to see all parts belonging to a certain group, we click the gives us the "Select Stock Group" window.



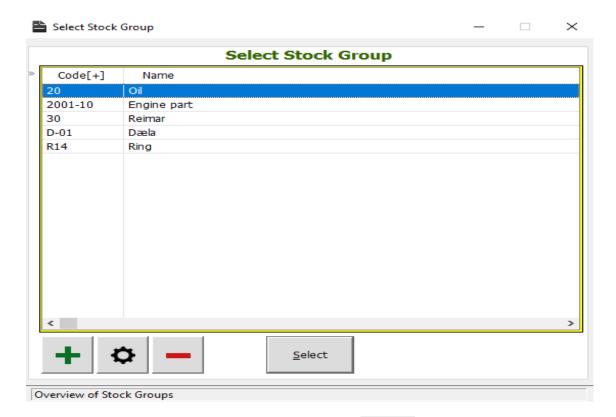

We choose the group we want to inspect and click or double-click the group name.

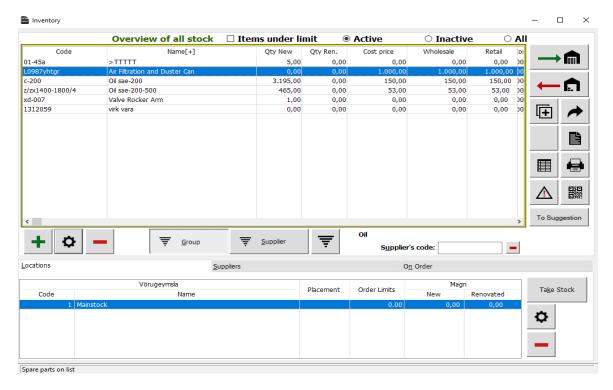

Now we have a complete list of all the parts belonging to this particular group.

We can also see in the bottom box, which stockroom this particular part is kept, its placement and how many new or renovated units we have.